
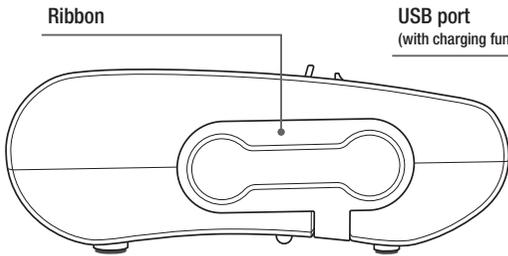
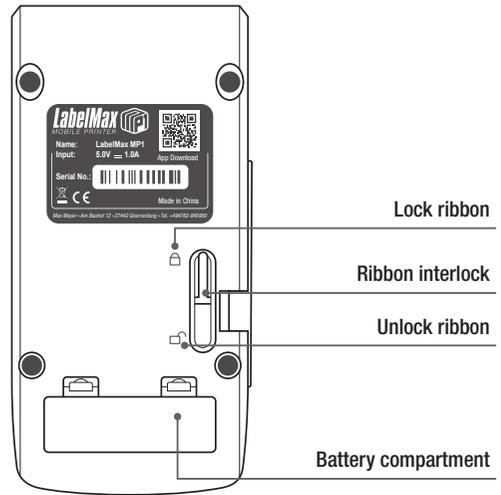


MAX Systems


Hoin

Instruction manual

LabelMax 
MOBILE PRINTER

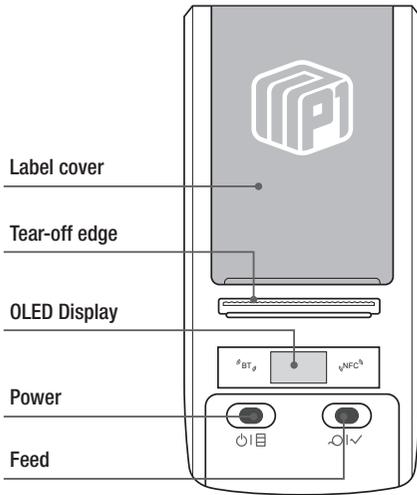

USB port
(with charging function for other devices)

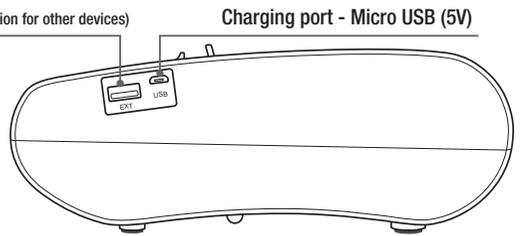

SAFETY INSTRUCTIONS

- Please do not disassemble the printer. Read this manual before operating the printer.
- Turn off the power immediately if a malfunction occurs. Remove the charging cable and battery immediately if the printer or charging cable begins to emit smoke or smell.
- Do not use the printer at gas stations or near flammable objects.
- Do not touch the print head after printing as it is still hot afterwards.
- Please use original ribbons to ensure good print quality and long service life of the device.
- Please charge the printer regularly if it is not in use for a long time so that the battery does not suffer.
- Make sure the printer is turned off before removing the battery.

MAINTENANCE

- Cleaning the exterior and label compartment: Gently wipe the exterior of the printer and the interior of the label compartment with a cloth dampened with water.
- Clean the printhead: Clean the printhead regularly, especially when the print quality deteriorates.

Clean the smooth part of the print roll with 100% ethanol by gently wiping it with a cotton swab.

Hello, here I am!

Your new colleague for markings, signs and labels in the field!
I'm straightforward, let's go:

Ready to print:

I am already equipped with a ribbon and a foil cartridge!

1

TURN IT ON


Turn on Bluetooth on your Android device,
turn on the LabelMax MP1 (press „Power“ button for 3 seconds)

2

GET STARTED

Start the SignMax MP app.
Now you can design and print the label as you wish on the tablet!

INSERT RIBBON

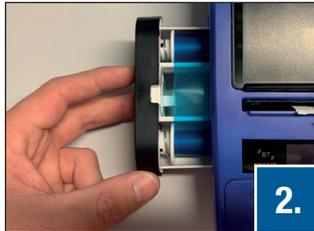

Check that the ribbon is tight and has no wrinkles. Make sure the locking lever on the bottom of the LabelMax MP1 is set to  and insert the ribbon into the printer. Gently push the ribbon into the printer and lock it by moving the lever to .

INSERT FOIL TAPE



Open the label cover (1) on the top of the LabelMax MP1 and insert the foil tape (2) into the device. Slide the side guide up to the foil tape to ensure a straight run of the material. Please make sure that the (foil) side to be printed is at the bottom. (3). Now push the foil in the guides against the feed roll until you notice a resistance. Next, press the „Feed“ key to feed the material (4).

LabelMax

MOBILE PRINTER



Specifications – LabelMax MP1	
Display Type	OLED Display
Print method	Thermal transfer printing
Resolution	300 DPI
Point per line	384 points per line
Print speed	15 - 50 mm/s
Operating time	150 - 180 meters (12,5% Deckung)
Standby time	ca. 5 years (switched off)
Battery capacity	2600 mAh
Charging current	5V USB
Loading time	6 - 7 hours
Powerbank function	supported
Print width	48 mm
Dimensions	205 (L) * 108 (B) * 78 (H) mm
Weight	725g
Accessories	Battery, ribbon, film material, bag with magnetic back
IP Standard	IP54
Operating temperature	0° C - 45°C
Interface	Micro USB, Bluetooth
Self-check function	Covers open, label stock missing, ribbon unlocked, battery low, overheated

AUTO STANDBY

The printer automatically turns off when inactive. The preset time for this is 15 minutes. The time can be changed in the printer menu.

MENU

Press the printer's power button briefly. A small gear wheel is now shown in the left side of the display. Press the feed button to switch the corresponding options.

POWERBANK FUNCTION

The printer can charge external devices such as a smartphone or tablet with 5V (500 mA) power.

**Do you need assistance with launching or installing the software?
Just call us, we are happy to be there for you!
+49 47 63 94 595 0**