

# »« Quick Installation Guide »«

## LabelMax VS1




### Prepare and set up the printer

Place the LabelMax on a flat, secure surface, then follow the steps below:


1. Open the case
2. Turn on the LabelMax with the blue main switch
3. The printer is ready to print and the Wi-Fi connection is established within a minute. A Wi-Fi connection is established with the printer name and the last digits of the serial number of the LabelMax. For example, LabelMaxVS1-12345
4. Wi-Fi connection password: labelmax
5. The device is prepared in such a way that you can print immediately after you have connected to the printer via the Wi-Fi network. Ready to Print!

### Loading the ribbon

1. Insert the right side of the ribbon first. Then, insert the left side to the hole at the left side of ribbon rewind hub (green).
2. Press the print head release button to open the print head mechanism.
3. Insert the right side of the ribbon supply spindle (marked "R") to the ribbon supply hub first. Then, insert the left side of ribbon supply spindle to the hole at the left side of the ribbon supply hub (green).
4. Pull the leader of the ribbon through the print head and stick the leader of the ribbon onto the ribbon rewinding role.
5. Turn the ribbon rewind hub until the ribbon plastic leader is thoroughly wound and the black section of the ribbon covers the print head. Wrap the ribbon around the ribbon rewind hub (green) at least 5 times.
6. Close the print head mechanism with both hands and make sure the latches are engaged securely.

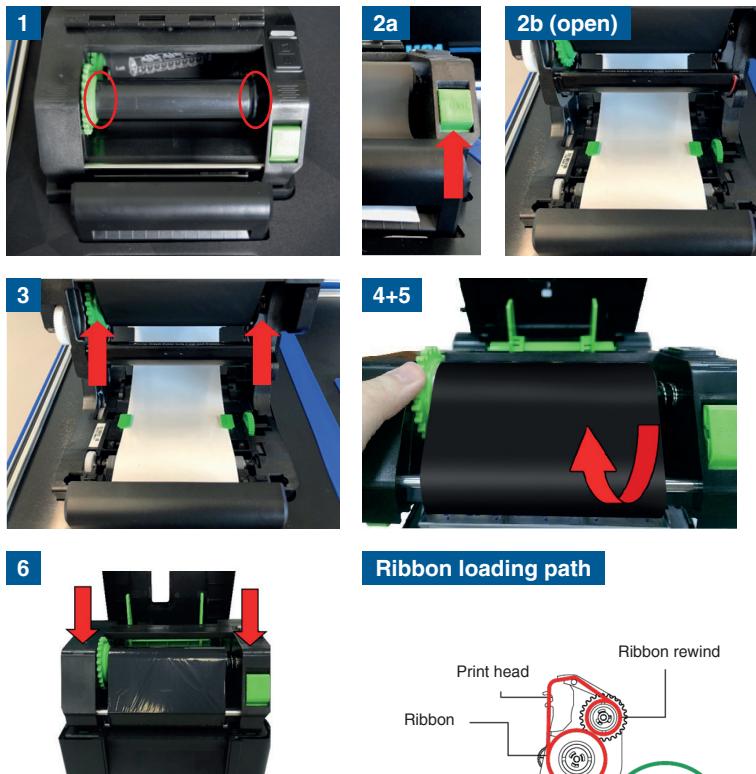

Ribbon loading path

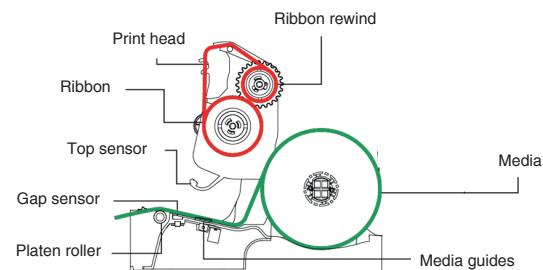


**MAX**  
Systems

## Insert the media

1. Open the case.
2. Insert the media supply spindle into the holder. Open the holder a little by pulling it up and let the spindle lock into the guide slots.
3. Push the print head release button to open the print head mechanism.

Note: The gap sensor position is moveable and the top sensor is fixed. Please make sure the gap sensor is at the location where media gap will pass through for sensing.

4. Feed the paper, printing side face up, through the media guides and place the label leading edge onto the platen roller. Move the media guides to fit the label width.
5. Close the print head mechanism with both hands and make sure the latches are engaged securely.

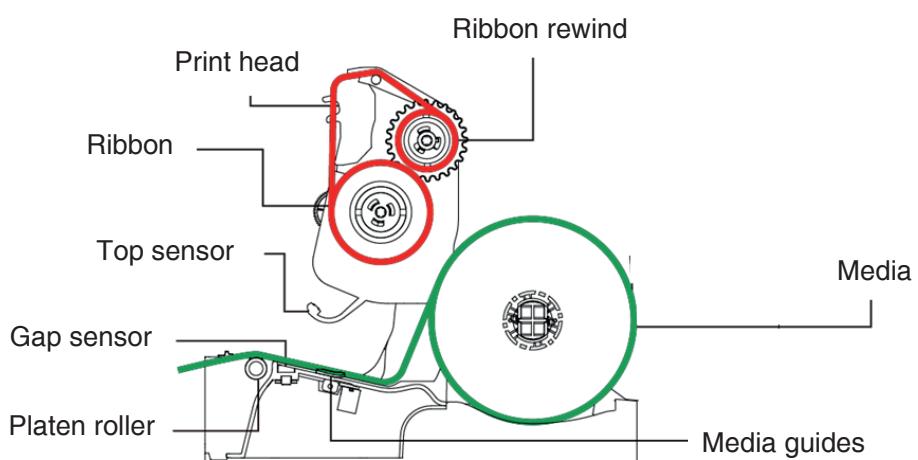

### WARNING / ATTENTION

HAZARDOUS MOVING PARTS. KEEP FINGERS AND OTHER BODY PARTS AWAY.

PARTIES MOBILES DANGEREUSES. TENIR LES DOIGTS ET LES AUTRES PARTIES DU CORPS ÉLOIGNÉS.