





Quick Installation Guide


MAX Systems GmbH • Am Bauhof 12 • 27442 Gnarrenburg

Tel.: +49(0)4763/94595-10 • Fax: +49(0)4763/94595-11


E-Mail: info@maxsystems.eu • www.maxsystems.eu

Quick Installation Guide


Printer Overview

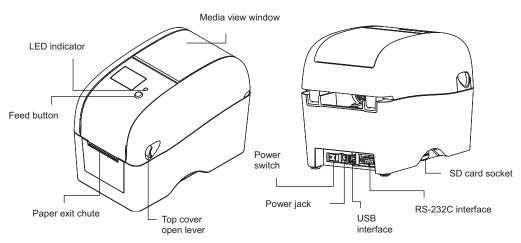


The interface picture in the quick start guide is for reference only. Please refer to the product specification for the interfaces availability.

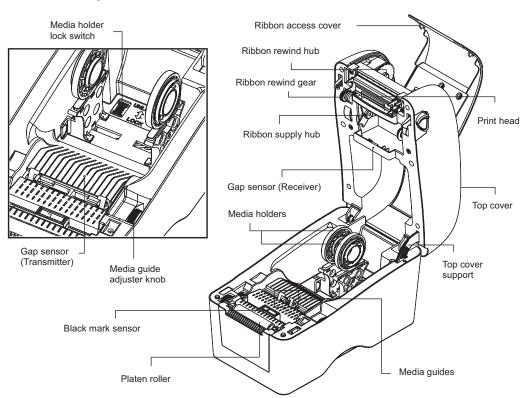


Open / Close the Top Cover

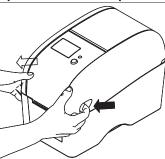

(1) Open the printer top cover by pulling (2) A top cover support at the rear of the tabs located on each side towards the front of the printer, then lift the top cover to the maximum open angle.

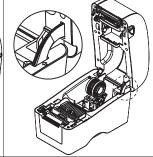


the printer will engage with lower inner cover to hold the printer top cover open.

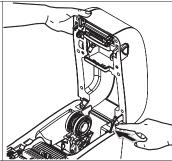


3) Hold the top cover and press the top cover support to disengage the top cover support with lower inner cover. Gently close the top cover.


Loading the Ribbon

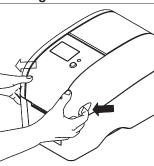


(1) Open the printer's top cover by pulling the top cover open levers located on each side of the printer and lifting the top cover to the maximum open angle.

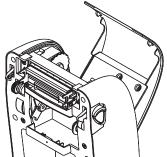


(2) Open the ribbon access cover.

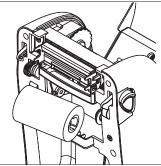

(3) Insert the ribbon right side onto the supply hub. Align the notches on the left side and mount onto the spokes.

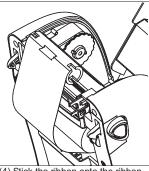


(4) Stick the ribbon onto the ribbon rewind paper core and insert the paper core onto the rewind hub.

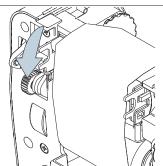


(5) Turn the ribbon rewind gear until the ribbon plastic leader is thoroughly wound and the black section of the ribbon covers the print head. Close the ribbon access cover and the top




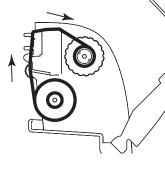


Loading the Media

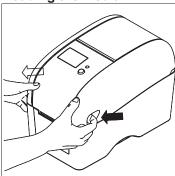


(1) Open the printer top cover by pulling the tabs located on each side towards the front of the printer, and then lift the top cover to the maximum open angle.

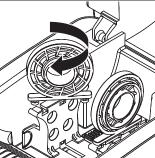


(2) The media holder can be used for 1" and 1.5" media core by rotating the upper part of label holder 180 degrees clockwise.

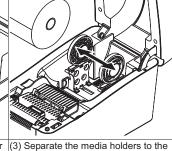


label roll width. Place the roll between the holders and close them onto the core.

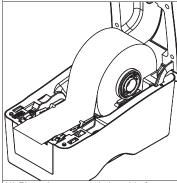

(4) Place the paper, printing side face up, (5) Move the media guides to fit the through the media guides, media sensor and place the label leading edge onto the platen roller.

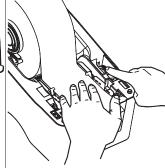


label width by turning the guide adjuster knob.

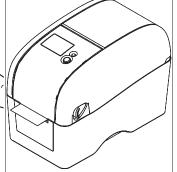

(6) Gently close the top cover. Make sure the cover latches securely.

* Loading Path for Media

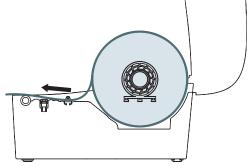

(7) Use "Diagnostic Tool" to set the media sensor type and calibrate the selected sensor. (Start the "Diagnostic tool" Select the "Printer Configuration" tab Click the " Calibrate Sensor" button)

Note:

Please calibrate the gap/black mark sensor when changing the media.

Button Functions

(1) Feed labels

When the printer is ready, press the button to feed one label to the beginning of next label.

(2) Pause the printing job

When the printer is printing, press the button to pause a print job. When the printer is paused the LED will blink green. Press the button again to continue the printing job.