

LABELTEX & MULTITEX TEXTILE FOIL

QUICK GUIDE



Print & cut desired design



Weeding (remove excess material)




Apply transfer foil



The printed motif must now adhere to the transfer foil!

Carefully remove the backing material of the textile film

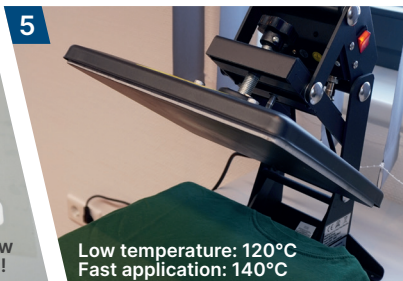

Low temperature: 120°C
Fast application: 140°C

Preheating the heat press/iron



Position the design on the textile



Low temperature: 120°C - 20s
Fast application: 140°C - 5s

Ironing/pressing the design



Remove transfer foil from the textile before it cools down (hot peel)



If corners/edges come loose when removing the transfer film, iron the film again for approx. 2 seconds